

Uniview

connecting on the (LAN) Local Network use this

- Example: 192.168.100.1:554/Streaming/channels/101/

connecting on the (WAN) outside of your Network use this: -

1st. you do require static IP Network on the other side

- Example: Router Static IP 188.247.84.4:555/Streaming/channels/101/

Hikvision

connecting on the (LAN) Local Network use this

- Example: 192.168.100.1:554/Streaming/channels/101/

connecting on the (WAN) outside of your Network use this: -

1st. you do require static IP Network on the other side

- Example: Router Static IP 188.247.84.4:555/Streaming/channels/101/

Dahua:

connecting on the (LAN) Local Network use this

- Example: rtsp://192.168.100.1:554/Live

connecting on the (WAN) outside of your Network use this: -

- Example: Router Static IP 188.247.84.4:555/live

<https://keytechsecurity.com/wp-content/uploads/2025/05/Diagram-scaled.png>

- **Tiandy: Streaming IP** 192.xx.xx.xx:554/ch01/realmonitor?subtype=0